



Technical Data Sheet

PRKAB 600



Fig. 2. Programming cable PRKAB 600.

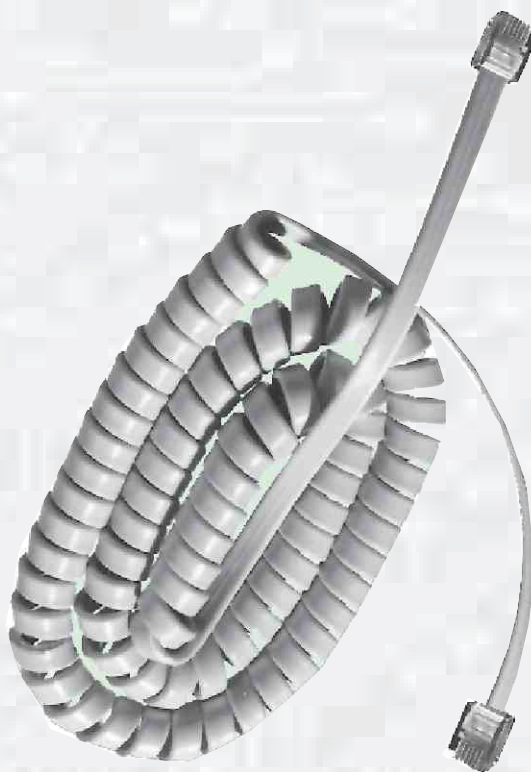


Fig. 3. Ancillary cable

Application

The programming cable PRKAB 600 serves to connect the Theta V604 and Theta TP-25k in standard transducer to a PC on which the PC software VC 600 is installed for purposes of programming the transmitter. The cable also provides the electrical insulation between the PC and the transmitter. The data are transferred in a semiduplex mode. The standard version of the Theta V 604 and Theta TP25k transducer can be programmed using the PRKAB 600. The power supply for the transmitter must be switched on in order to program it.

The connections between PC ↔ PRKAB 600 ↔ Theta V604 and Theta TP-25k can be seen from Fig. 1.

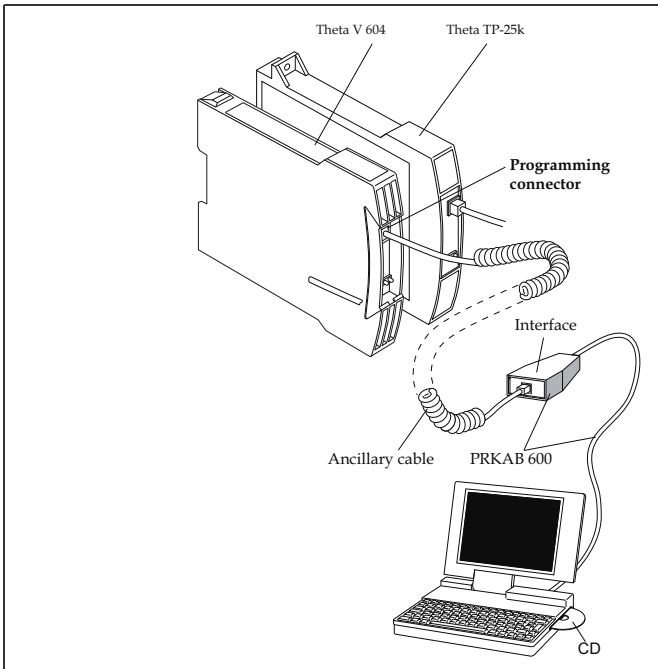


Fig. 1. Example for a connection for programming with a Theta V 604.

The electronic circuits convert the standard RS 232 C interface signals (± 10 V) to TTL signals of 0/5 V which can be read by Theta V 604 Theta TP-25k

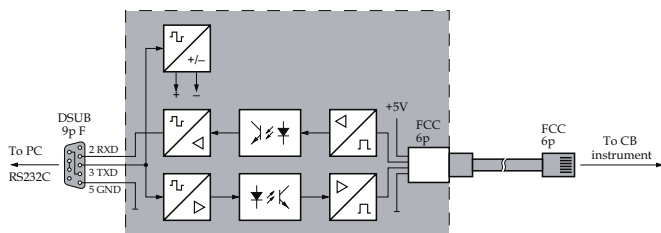


Fig. 6. Schematic diagram PRKAB 600.



Fig. 2. Programming cable PRKAB 600

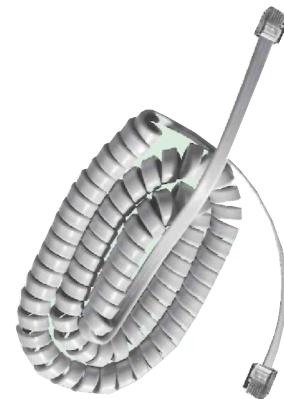


Fig. 3. Ancillary cable



Fig. 5. Configuration software VC 600 on CD.

Technical Specifications

PC interface connector

Serial interface	COM 1, 2, 3 or 4 (RS 232 C)
Sub-D connector	9 pin
Data transfer ratio	Between 1200...9600 baud, depending on PC software
Send signal level	- 5.6 V / + 5.6 V
Receive signal level	-12...3 V / + 3...12 V
Power consumption	Approx. 80 mW

Transmitter programming connector

FCC-68 socket	6/6 pin
Signal level	TTL (0/5 V)
Power consumption	Approx. 50 mW

Transmitter connecting cable

FCC-68 6/6 pin connectors at both ends uncrossed

Intrinsically safe

The PRKAB 600 programming cable is suitable for use with standard versions and explosion-proof "intrinsically safe" Theta V 604 and Theta TP-25k transducer

Electric isolation

Between the serial interface on the PC and the transmitter
Test voltage 4 kV, 50 Hz, 1 min.

Weight Approx. 200 g

Dimensional drawing

All Dimensions are in mm

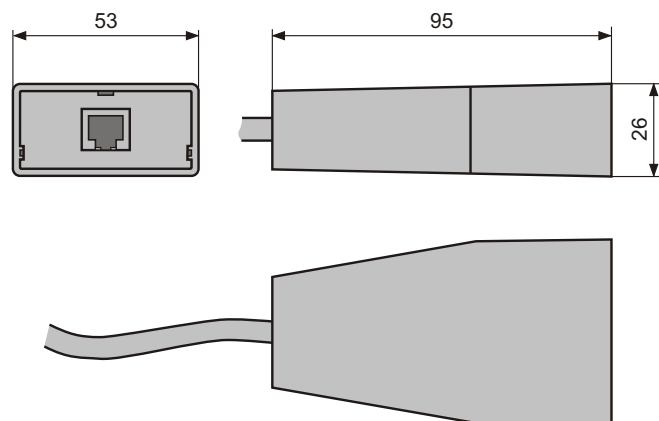



Fig. 7. Programming cable PRKAB 600..

Accessories and spare parts


Description

Configuration software on CD with all configuration programmes presently available.

Programming cable PRKAB 600 for ThetaV604 and Theta TP-25k

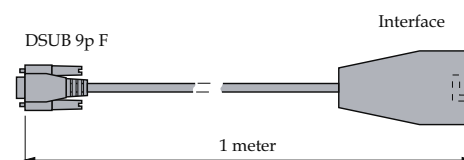

Ancillary cable for Theta V604 and Theta TP-25k

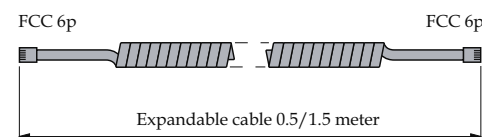

Operating Instructions PRKAB 600



Sifam Tinsley Instrumentation Inc.
3105, Creekside Village Drive,
Suite No. 801, Kennesaw,
GA 30144 (USA)
E-mail Id : psk@sifamtinsley.com
Web : www.sifamtinsley.com
Contact No. : +1 404 736 4903

Sifam Tinsley Instrumentation Ltd
Unit 1 Warner Drive,
Springwood Industrial Estate
Braintree, Essex, UK, CM72YW
E-mail: sales@sifamtinsley.com
Web: www.sifamtinsley.com/uk
Contact: +44(0)1803615139