

OPERATING MANUAL

Theta 10A/10V

TRUE RMS CURRENT OR VOLTAGE TRANSDUCER



Read & understand this manual before using the Instrument



The proper and safe operation of the device assumes that the Operating Instructions are read and the safety warnings given in the various sections Mounting, Electrical Connections, Commissioning are observed.



All operations concerning installation, electrical connection & commissioning must be carried out by qualified, skilled personal & national regulations for the preventions of accidents must be observed.

If the equipment is used in a manner not specified by the manufacture, the protection provided by the equipment may be impaired.

Operating Instructions

Contents

1. Read first and then	5
2. Brief Description	5
3. Product Features	5
4. Overview of the Parts	6
5. Scope of supply	7
6. Technical Data	7
7. Mounting	11
8. Electrical Connections	13
9. Commissioning	15
10. Dimensional Drawings	15

1. Read first and then



CAUTION!



The proper and safe operation of the device assumes that the Operating Instructions are read and the safety warnings given in the various sections Mounting, Electrical Connections, Commissioning are observed.

All operations concerning installation, electrical connections and commissioning, must be carried out by qualified, skilled personnel, and national regulations for the prevention of accidents must be observed.

2. Brief description

The Transducer is used to convert AC Current or Voltage input into an proportional DC Current or Voltage output signal. Output signal generated is proportional to the root mean square value of the input Current or Voltage.

The transducer output is galvanically isolated from the input signal and auxiliary supply.

3. Product Features

Measuring Input :

AC Current/ Voltage input signal , sine wave or distorted waveform.

Auxiliary Power Supply:

1)40 V-300 V AC/DC.

or

2)24 V-60 V AC/DC $\pm 10\%$.

Analog Output :

Isolated analog output, which can be Voltage or Current.

Accuracy:

Output signal accuracy class 0.2 as per International Standard **IEC/EN 60688**.

LED Indication:

LED indication for power ON.

4. Overview of the parts

Figure 1 shows those parts of the device which are used for mounting, electrical connections and other operations described in the Operating instructions.

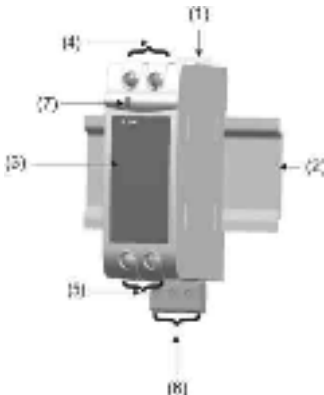


Fig. 1: Overview of the Transducer parts

- (1) Fixing Bracket
- (2) Top-hat rail
- (3) Front sticker
- (4) Input Terminals
- (5) Output Terminals
- (6) Auxiliary Supply Terminals
- (7) Green LED for Power ON indication.

5. Scope of Supply

The set of the Transducer is consist of :

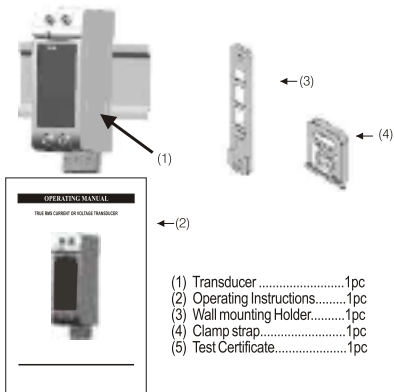


Fig. 2: Transducer Set

6. Technical Data

Measuring Input X:

Voltage Transducer :

Final value of Nominal input

$$63.5V \leq U_N \leq 500 V.$$

Voltage U_N (X2,AC RMS)

Nominal Frequency F_N

50 or 60 Hz.

Nominal input Voltage burden

$< 0.6 VA$ at U_N .

Overload Capacity:

$1.2 * U_N$ continuously,

$2 * U_N$ for 1 second, repeated

10 times at 10 second intervals.

Current Transducer :

Final value of Nominal input Current I_N (X2,ACRMS)	1 A or 5 A.
Nominal Frequency F_N	50 or 60 Hz.
Nominal input Current burden	< 0.2VA at I_N .
Overload Capacity:	1.2 * I_N continuously, 10 * I_N for 3 second, repeated 5 times at 5 minute intervals, 20 * I_N for 3 second, repeated 5 times at 5 minute intervals, 50 * I_N for 1 second.

Measuring Output Y:

Output type	Load independent DC Voltage/Current.
Load independent DC output (Y2)	0...10mA,0...20mA,2...10mA,0...1mA 4...20mA,0...5V or 0...10V.
Output burden with DC current output Signal	$0 \leq R \leq 15 \text{ V/Y2}$
Output burden with DC voltage output Signal	$Y2/(2 \text{ mA}) \leq R \leq \infty$
Current limit under overload $R=0$	$\leq 1.6*Y2$ with Current output. $\leq 25 \text{ mA}$ with Voltage output.
Voltage limit under $R = \infty$	$\leq 1.6*Y2$ with Voltage output. $\leq 25 \text{ V}$ with Current output.
Residual Ripple in Output signal	$\leq 1\%$ pk-pk.
Response Time	< 250 ms.

Auxiliary Supply H:

Rated operating voltage(H)	40 to 300 V AC/DC
Rated operating range of frequency(H)	45... <u>50...60</u> ...65 Hz
Power consumption (H)	< 4 VA
Rated operating voltage(L)	24 to 60 V AC/DC $\pm 10\%$
Rated operating range of frequency(L)	40... <u>50...60</u> ...400 Hz

Accuracy:(Acc. to IEC/EN 60 688)
Reference Value

Accuracy

Reference conditions for Accuracy :

Ambient temperature

Pre-conditioning

Input Variable

Input waveform

Input signal frequency

Auxiliary supply voltage

Auxiliary supply frequency

Output Load

Output end Value Y2
(Voltage or Current)
class0.2

23°C +/- 1°C

30 min acc. to IEC/EN 60 688

Rated Voltage Range
/Rated Current Range.

Sinusoidal, Form Factor 1.1107

50....60Hz

Rated Value $\pm 1\%$

Rated Value $\pm 1\%$

$R_N = 7.5 \text{ V} / Y_2 \pm 1\%$ With DC
current output signal.

$R_N = Y_2 / 1 \text{ mA} \pm 1\%$ With DC
voltage output signal.

Acc. to IEC/EN 60 688

Miscellaneous

Additional Error :


Temperature influence

Influence of Variations:


$\pm 0.2\% / 10^\circ\text{C}$

As per IEC/EN 60 688 standard.

Output characteristics:

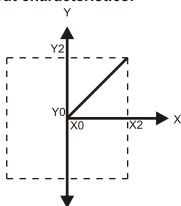

X0 = Start value of input
X2 = End value of input
 U_N = Nominal input voltage

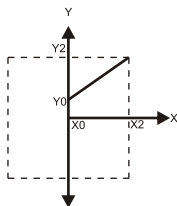

Y0 = Start value of output
Y2 = End value of output
 I_N = Nominal input current

Safety:

Protection Class	II (Protection Isolated, EN 61 010)
Protection	IP 40, housing according to EN 60 529 IP 20 ,terminal according to EN 60 529
Pollution degree	2
Installation Category	III (at $\leq 300V$) II (at $> 300V$)
Insulation Voltage	50Hz, 1min. (EN 61 010-1) 5500V, Input versus outer surface 3700V, Input versus all other circuits 3700V, Auxiliary supply versus input and output circuits.

Installation Data:

Mechanical Housing	Lexan 940 (polycarbonate) Flammability Class V-0 acc. To UL 94, self extinguishing, non dripping, free of halogen
Mounting position	Rail mounting / wall mounting
Weight	Approx. 0.12kg

Connection Terminal:

Connection Element	Conventional Screw type terminal with indirect wire pressure
Permissible cross section of the connection lead	$\leq 4.0 \text{ mm}^2$ single wire or $2 \times 2.5 \text{ mm}^2$ fine wire

Environmental:

Nominal range of use	0 °C... <u>23 °C</u> ... 45 °C (usage Group II)
Storage temperature	-40 °C to 70 °C
Relative humidity of annual mean	$\leq 75\%$
Altitude	up to 2000 m

Ambient tests:

IEC 60 068-2-6	Vibration
Acceleration	$\pm 2 \text{ g}$
Frequency range	10....150...10Hz,
Rate of frequency sweep	1 octave/minute
Number of cycles	10, in each of the three axes
IEC 60 068-2-27	Shock

Acceleration	3 x 50g
	3 shocks in each direction
EN 60 068-2-1/-2/-3	Cold, Dry, Damp heat
IEC 61000-4-2/-3/-4/-5/-6	
EN 55 011	Electromagnetic compatibility.

7. Mounting

The Transducer can be mounted either on a top-hat rail or directly onto a wall or mounting plate.



Make sure that the ambient temperature stays within the permissible limits :
0° C and 45° C



Fig. 3 Top-hat rail Mounting



Fig. 4 Wall Mounting

As the front of the enclosure conforms to IP 40. The terminals of the product should be protected from liquids. Transducer should be mounted in a reasonably stable ambient temperature and where the operating

temperature is within the range 0 to 45°C . Vibration should be kept to a minimum and the product should not be mounted where it will be subjected to excessive direct sunlight.

Caution

1. In the interest of safety and functionality this product must be installed by a qualified engineer, abiding by any local regulations.
2. Voltages dangerous to human life are present at some of the terminal connections of this unit. Ensure that all supplies are de-energised before attempting any connection or disconnection.
3. These products do not have internal fuses therefore external fuses must be used to ensure safety under fault conditions.

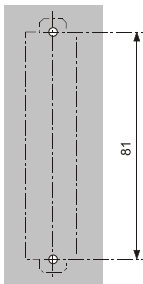



Fig. 5. Drilling plan

Drill 2 holes in the wall or panel as shown in the drilling plan (Fig. 5). Now secure the wall mounting holder to the wall or panel using two 4 mm diameter screws.

8. Electrical connections

Input connections are made directly to screw-type terminals with indirect wire pressure. Choice of cable should meet local regulations. Terminal for Current inputs will accept up to 4.0 mm² single wire or 2 x 2.5 mm² fine wire.

	<p>Make sure that the cables are not live when making the connections !</p> <p>The 230 V power supply is potentially dangerous !</p> <p>Ensure proper grounding of panel before installation.</p>
<p>Risk! Electric Shock</p>	

Connection	Terminal details	
Measuring input	~	3
	~	4
Auxilliary Power supply	~ , +	5
	~ , -	6
Measuring output	+	1
	-	2

Note:

1. It is recommended to use wire with lug connection with transducer.
2. For disconnecting the device use switch or circuit breaker. It shall be included at the site within easy reach of the operator.

Specification:

Disconnecting device used must meet the relevant requirements of IEC-60947-1 & IEC-60947-3.

For Aux: At least 1.5 times of applied power supply.

For Measuring Input: At least 1.5 times of measuring inputs.


(Switching time of the device should be <0.1sec for Aux & I/P both)

Fusing: It is recommended that all voltage lines are fitted with 1Amp HRC fuse.

Cleaning & Maintenance: No maintenance is required beyond periodic checking of terminal areas & ensuring the connection remains tight.



Fig. 6. Front View of Device for electrical Connections



X = Input

Y = Output

H/L = Power supply

Marking & Rating: Side Label shows function, electrical rating.

9. Commissioning

Switch on the measuring inputs and the power supply.
The green LED light remains continuously ON after switching on.

10. Dimensional drawings

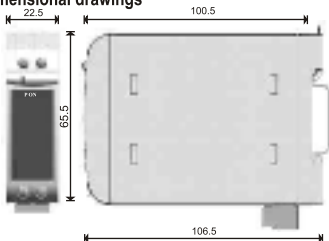


Fig. 7. Transducer Dimensions.

Note : All Dimensions are in mm.

Meaning of symbols on the instrument



Warning concerning a point of danger
(Attention: observed documentation)



Equipment protected through by
Double insulation or reinforced
insulation



DC voltage/Current



AC/DC voltage



Isolation between input versus all other
circuits is 3.7KV .

Notes

Notes

WARRANTY

Dear Customer,

You are now the privileged owner of Transducer product that ranks the first of its kind in the world.

Company provides 12 months warranty from the original date of Purchase against defective material and workmanship.

In the unlikely event of failure of this meter / accessories within the warranty period, Company will repair meter / accessories free of charge, Please hand over the meter / accessories to the dealer / stockist from whom you have purchased along with this card and relevant Cash memo / Invoice. This warranty entitles you to bring the meter / accessories at your cost to the nearest stockist / dealer and collect it after repairs.

NO TRANSPORTATION CHARGES WILL BE REIMBURSED.

The warranty is not valid in following cases:

- 1) Warranty card not duly signed and stamped, and original Cash memo / Invoice are not sent along with Transducer .
- 2) Complete warranty card is not presented to authorised person at the time of repairs.
- 3) Meter / accessories is not used as per the instructions in the instruction manual.

- 4) Defect caused by misuse, negligence, accidents, tampering and Acts of God.
- 5) Improper repairing by any person not authorised by the company.
- 6) Any sort of Modification, Alteration is made in electrical circuitry.
- 7) Seal provided inside is broken.

In case of dispute to the validity of the warranty, the decision of Company service center will be final.

If you bought this product directly from the company, and if you notice transit damage, then you must obtain the insurance surveyors report and forward it to Company.

Thank you.

(To be filled by authorised dealer)

Model No. : _____
 Serial Number : _____
 Date of Purchase : _____
 Cash Memo / Invoice No. : _____
 Dealer's / Stockist's Signature : _____
 Dealer's / Stockist's Stamp : _____

Scope of supply :

- 1) Transducer
- 2) Instruction Manual
- 3) Test Certificate
- 4) Warranty Card
- 5) RS-232 Interface Cable
- *6) Software

* Only with Programmable Transducer

Notes



sifam tinsley
INSTRUMENTATION LTD. UK

Sifam Tinsley Instrumentation

3105, Creekside Village Drive,
Suite No 801, Kennesaw,
Georgia 30144
Contact Number: +1.404.736.4903
Web: www.sifamtinsley.com

Sifam Tinsley Instrumentation Ltd.

Central Buildings, Woodland Close,
Old Woods Trading Estate,
Torquay, Devon, England, TQ27BB
Website: www.sifamtinsley.com/uk
Contact Number: +44(O) 1803 615139
E-mail: info@tinsley.co.uk
